



**DESIGN®
PARQUET**
France

PATENTED
SYSTEM

Bathroom parquet floor
⊕ easier to lay

Navylam®⊕

Doussie


Navylam[®]+

Navylam+ это уникальная система быстрой и легкой укладки паркета в ванной комнате.
Деревянные планки уже покрыты маслом на заводе. и имеют двойное интегрированное соединение.
Без шлифовки и дополнительного покрытия. Просто нанесите немного клея на шип-паз, соедините доски и приклейте их к основанию.
Итак, ваш пол надежно защищен от влаги.

Bathroom parquet floor

+ easier to lay

PATENTED
SYSTEM

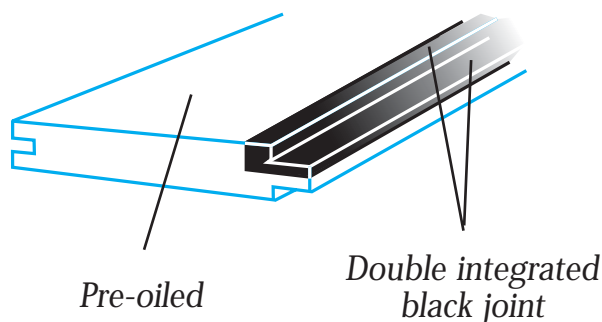

Size : 68x9 mm - Length : 400-1200 mm - Black Navyjoint

Более 10 лет компания Design Parquet специализируется на производстве индивидуальных полов и аксессуаров (плинтуса, ступени...)

От классических то совсем вычурных, от рустика до селекта - деревянные полы никогда не выходят из моды.

Стильные и удобные, они выдерживают большие нагрузки и могут быть использованы повсеместно.



Acacia

Origin **EUROPE** • Species **ACACIA**

Colour **Clear yellow with orange hues**

Size : 68x9 mm - Length : 400-1200 mm - Black Navyjoint





Wenge

Origin **AFRICA** • Species **WENGE**

Colour **Dark brown with purple/black hues, and fine brown and white grain**

Size : 68x9 mm - Length : 400-1200 mm - Black Navyjoint

Origin **ASIA** • Species **TEAK** • Colour **Golden brown with strong black/brown variations stabilizing to a light brown colour**

Size : 68x9 mm - Length : 400-1200 mm - Black Navyjoint

Teak



Mutenye

Origin **AFRICA**

Species **MUTENYE**

Colour **Brown with dark brown grain pattern**

Size : 68x9 mm - Length : 400-1200 mm - Black Navyjoint





Iroko

Origin **AFRICA** • Species **IROKO / KAMBALA**
 Colour **Yellow to brown with dark brown hues**
 Size : 68x9 mm - Length : 400-1200 mm - Black Navyjoint

Navylam®+

Doussie

Origin **AFRICA** • Species **DOUSSIE**
 Colour **Golden red, becoming more intense red in sunlight**
 Size : 68x9 mm - Length : 400-1200 mm - Black Navyjoint



DESCRIPTION OF THE PRODUCT

- Format:
- Thickness: 9 mm
 - Width: 68 mm
 - Length: 400 to 1200 mm

FINISHING: The product is already pre-oiled with a double integrated joint in polymer. To have a perfect watertightness, you must stick in continue this joint with the transparent glue **Navycol+** ; when you lay your parquet flooring. Without the using of this glue, the watertightness of the product will be not warranted.

SPECIES AVAILABLE: 6 species

Acacia, Doussie, Iroko/Kambala, Teak, African Teak and Wenge.

WOOD: Wood is natural living material and the colour evolves through time, as it matures. Some wooden species oxidize in the air and change of colour gradually in the time. They tend to stabilize in colour at the end of one year, even more. Various natural nuances can thus appear during the laying of products.

USE ADVISES

To have all components for a better laying of the **Navylam+** flooring, we advice you to use the **KIT NAVYLAM+** , for 5 sq.m (obligatory for the warranty). It is composed of: 1 cloth for cleaning, glue for the watertightness of joints, wood chocks for expansion space, 1L of Navyoil, 1 cartridge of black Navyjoint and 2 adhesive tapes.

3 POSSIBILITIES

• **Cordon:** Directly on the support with **Navycol PU** (all the 10 cm)

• **Full:** Directly on the support with **Navycol PS**. **Navylam+** is compatible with a low temperature and reversible underfloor heating. For the reversible underfloor heating, you exclusively use the **Navycol PS** with a full gluing.

(See the DTU for the process to put on the heating before and after the laying)

• **With an adhesive undercoat ISO dB :** (Recommended): ISO DB is a system two in one, insuring at once the fixation of the parquet on the screed and acting as underlayer of sound insulation. Without drying and waiting the dry of the glue, ISO DB is ready-to-use and allows a fast implementation of surfaces. Information on www.designparquet.fr



LAYING: We recommend you before to glue, to place some different strips of parquet on the floor every 3 rows to harmonize colours and prepare your sections. After that, draw a line on the floor to delimit the surface to glue. Take off strips and place them with the result to glue in the right order.

Begin the laying of your bathroom parquet flooring, do not forget to let some place around 5 mm all around your room to do the expansion joint. For the first line, the groove is on the wall side and the tongue facing you. Now that the first line is laying, you have to stick the tongue with the **Navycol+** and also in the end of the blade. If the glue overflows on the wood flooring, clean it immediately. Continue to lay with the same process. The next step is the expansion joint. Before to begin, protect your parquet flooring in sticking an adhesive all around your room, in peripheral. Run the **Navyjoint** and smooth it with a spatula. Remove the adhesive and let dry.

FINISHING: After laying, clean the wood flooring with a floorcloth, a little wet. And then apply with a rag one or two thin coats of oil (**Navyhuile**), it is the same oil used for the maintenance. Do not let the oil on joint.

PREDISPOSITION OF LAYING

SUPPORT:

It must be according to the actual DTU-norm. You must take care to have a perfect flatness because you have a finished product, which it does not need after laying to sandpaper. Packages will be open when you lay to have a better stabilization due to the hygrometry of the room. The hygrometry during the laying must be stable and between 45% and 65%. The dampness of the mortar or concrete support must be equal or less than 3% at a depth of 2 cm. For others, refer to the technical application document, all information about dampness are specified. The heating system must be put on few days before laying your wood flooring (see DTU 51.2). If it exceeds 3%, use ISO ALU TB (Be careful, it is not compatible on heating floor). If it is laying on underfloor heating, the dampness of the support must be less than 2% and for an anhydrite screed, less than 0,5%.

WARRANTY: Navylam+ is guaranteed

for bathroom (laying on the floor) without prejudice:

- The installation is conformed to the above instructions
- The exclusive use of our products **Navycol PU** or **PS**, **NAVYCOL+** and **NAVYHUILE**.
- A regular and conform maintenance of the parquet flooring

MAINTENANCE: **Navylam+** flooring can be cleaned easily. To renovate your bathroom wood flooring **NAVYLAM+** , it is advised to use the spray or the can "**NAVYHUILE**" (available in all our retailers) and wipe with a clean moist cloth.



1 – Sticking cordon with **NAVYCOL**



2 – Gluing of tongues with **NAVYCOL+**



3 – Gluing in the end of blade




4 – Place the blade on the extremity of the previous one



5 – Apply then the blade to its length



6 – Apply a peripheral joint "**NAVYJOINT**" and smooth it



**DESIGN®
PARQUET**
France



Iroko/Kambala

DESIGN PARQUET®

P.A. de Torcé Est - Montigné - 35370 TORCÉ - FRANCE

Магазин напольных покрытий "Евро Паркет"
127238 г. Москва, Дмитровское шоссе 71
info@eparket.com, www.eparket.com
Тел.: +7(495) 792-91-65

www.designparquet.fr